


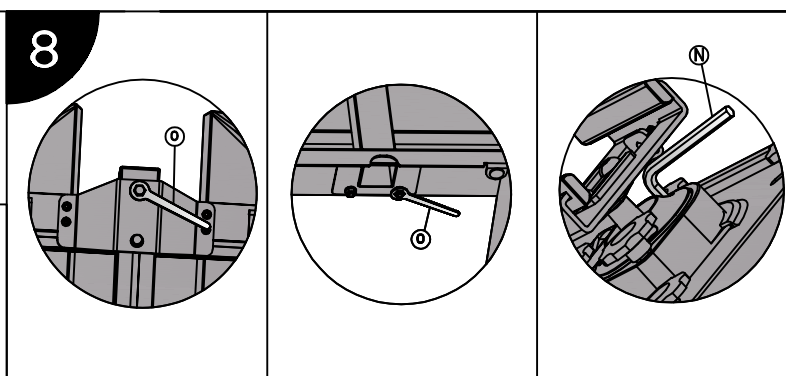
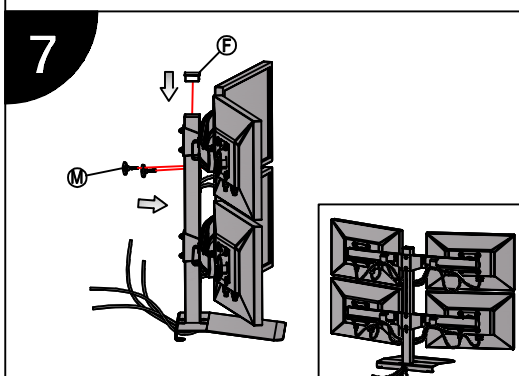
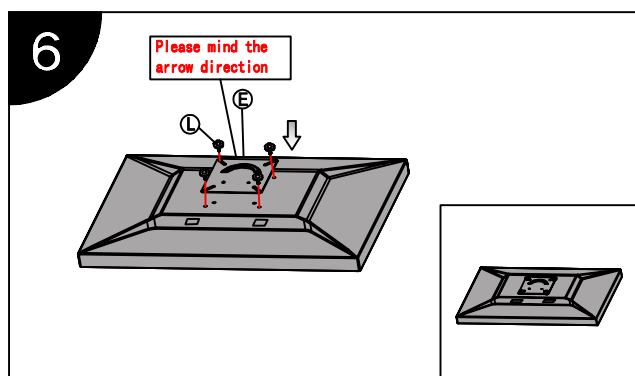
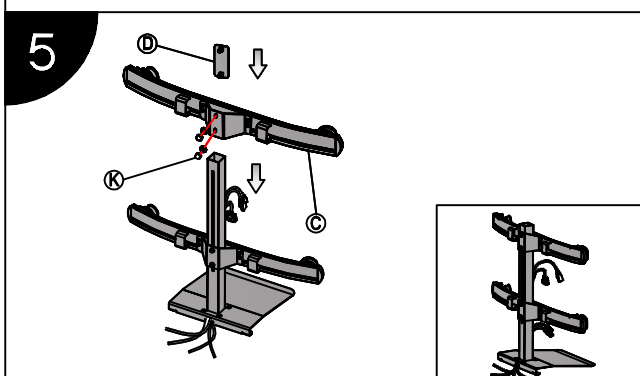
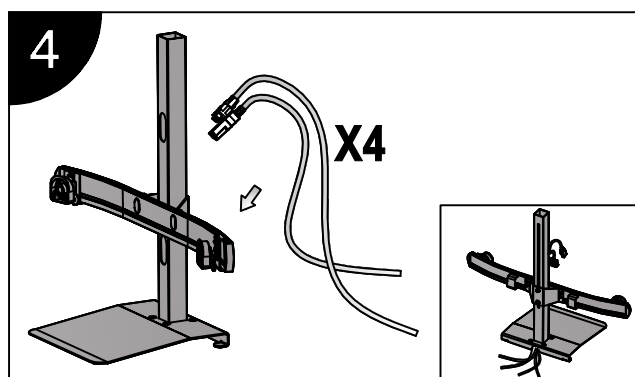


Installation Manual


 
 


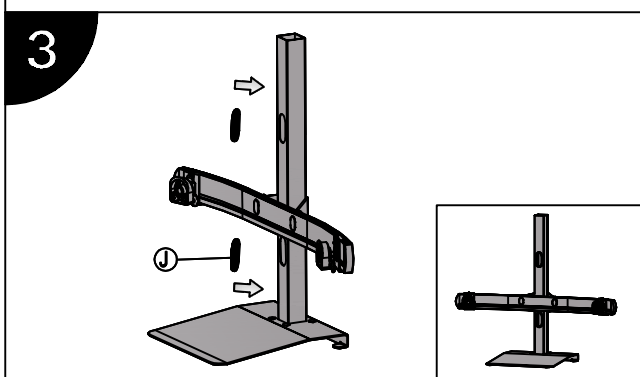

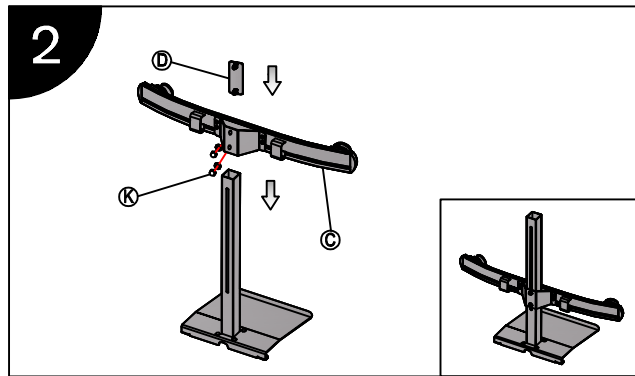

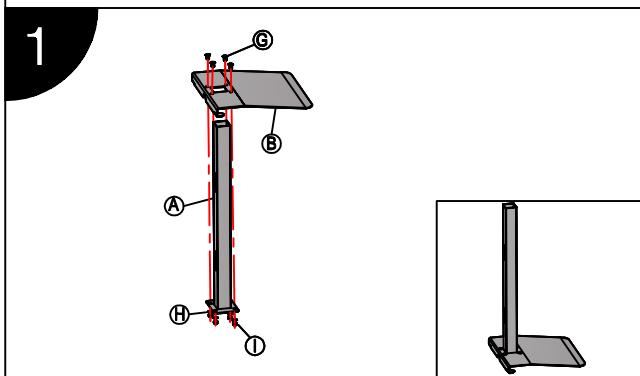




 
Model No.: BL401

Installation Steps



Installation Manual

Model No.: BL401

Parts list			
No.	ITEM	SPECS	QUANTITY
A			1
B			1
C			2
D			2
E			4
F			1
G		M8*16	4
H		M8	8
I		M8	4
J			2
K		M8	4
L		M4*12	16
M		M4*20	8
N		M4	1
O			1